

Figure 1. FW327 ALU Installation

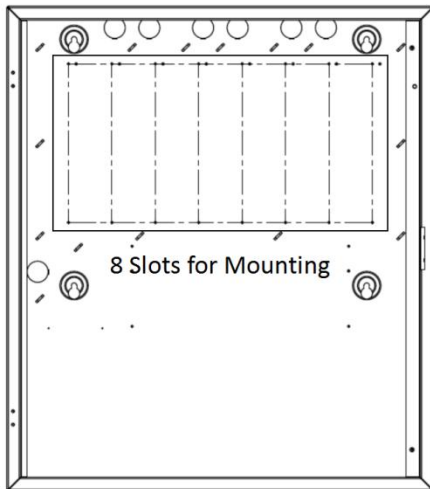


Figure 2. FW106 FACP Mounting Positions

3. Connect the FW327 with the FW201 AMI and/or the other units through the two 4-pin terminals for CAN Bus and Input: 24VDC, using the wires and terminals provided, see Figure 3. The terminal upside is for the addressable loop circuit.

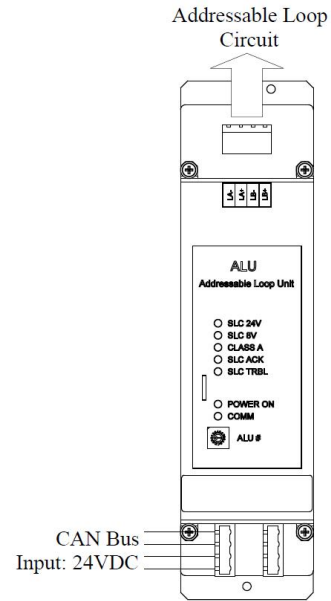


Figure 3. FW327 Terminals

4. For more details about the FW327 installation, please refer to the installation and operation manual *DOC-FW106-UM*, section *Addressable Loop Circuit Wiring*.